


Parts & Installation Instructions

Power Box 58 & 812

Power Box 58

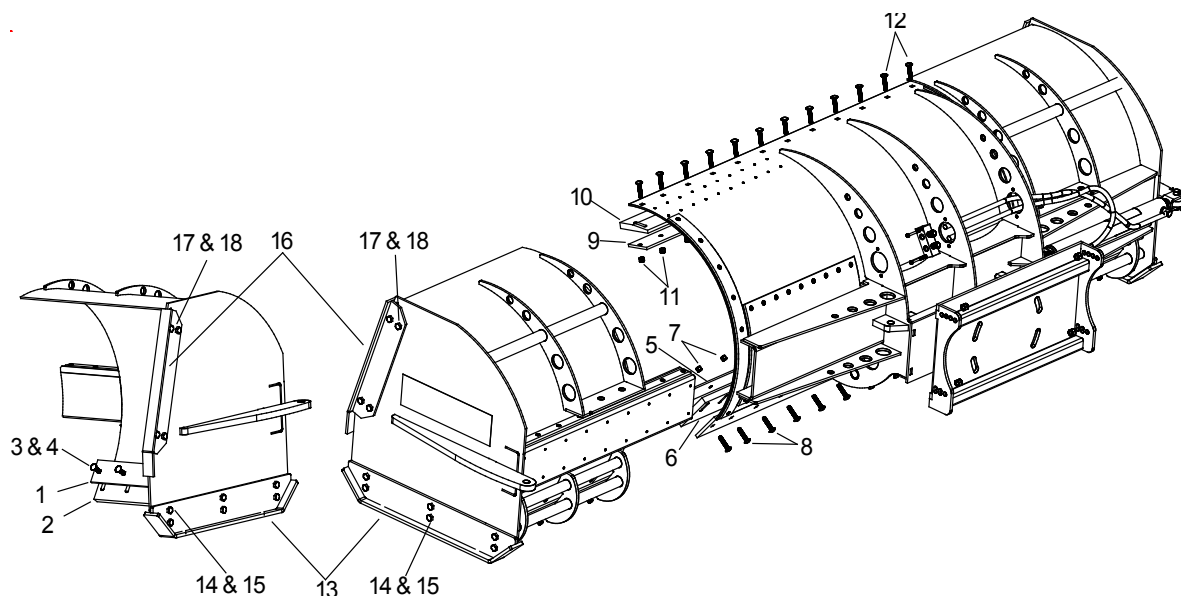

Parts List

Item	Part No.	Qty.	Description
	08468		Rubber Cutting Edge Wing Kit
1	16192	1	• Cutting Edge Strap Wing
2	16194	1	• Rubber Cutting Edge Wing
	90894	1	• 1-1152 Power Box Replacement Kits
	08973	1	• Hardware Bag
3	20307	8	• Locknut 1/2-13
4	21655	8	• Bolt C 1/2-13 x 2-1/2" Gr.5
	08467		Rubber Cutting Edge Center Bottom Kit
5	16191	1	• Cutting Edge Strap Bottom
6	16193	1	• Rubber Cutting Edge Bottom Center
	90894	1	• 1-1152 Power Box Replacement Kits
	08972	1	• Hardware Bag
7	20307	11	• Locknut Esna 1/2-13
8	21655	11	• Bolt C 1/2-13 x 2-1/2" Gr.5
	08467		Rubber Cutting Edge Center Backdrag Kit
9	16191	1	• Back Drag Strap Center Top
10	16193	1	• Rubber Back Drag Edge Center Top
	90894	1	• 1-1152 Power Box Replacement Kits
	08972	1	• Hardware Bag
11	20307	11	• Locknut Esna 1/2-13
12	21655	11	• Bolt C 1/2-13 x 2-1/2" Gr.5
	09113		Main Bottom Ski Kit
13	16185	1	• Main Bottom Ski
	90894	1	• 1-1152 Power Box Replacement Kits
	08971	1	• Hardware Bag
14	20140	12	• Bolt H 5/8-11 x 1-3/4"
15	20309	12	• Locknut 5/8-11
	09114		Main Backdrag Ski Kit
16	16188	1	• Main Top Ski
	90894	1	• 1-1152 Power Box Replacement Kits
	08971	1	• Hardware Bag
17	20140	8	• Bolt H 5/8-11 x 1-3/4"
18	20309	8	• Locknut 5/8-11


Parts indented are included in the assembly under which they are indented.

Meyer Products LLC reserves the right, under its continuing product improvement program, to change construction or design details, specifications and prices without notice or without incurring any obligation.

Parts & Installation Instructions

Power Box 58 & 812

Power Box 812

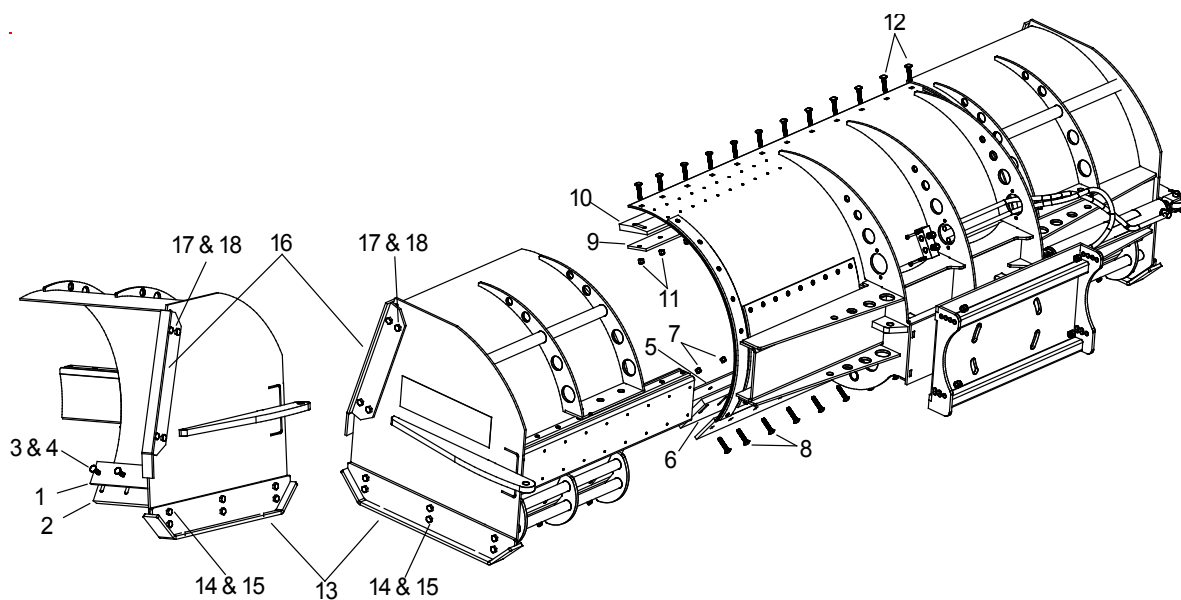

Parts List

Item	Part No.	Qty.	Description
1	08450	1	Rubber Cutting Edge Wing Kit
2	16105	1	• Cutting Edge Strap Wing
3	16106	1	• Rubber Cutting Edge Wing
4	08459	1	• Hardware Bag
5	20307	12	• Locknut 1/2-13
6	21655	12	• Bolt C 1/2-13 x 2-1/2" Gr.5
7	08451	1	Rubber Cutting Edge Center Bottom Kit
8	16079	1	• Cutting Edge Strap Bottom
9	16085	1	• Rubber Cutting Edge Bottom Center
10	08460	1	• Hardware Bag
11	20307	18	• Locknut Esna 1/2-13
12	21655	18	• Bolt C 1/2-13 x 2-1/2" Gr.5
13	08452	1	Rubber Cutting Edge Center Top Kit
14	16080	1	• Back Drag Strap Center Top
15	16081	1	• Rubber Back Drag Edge Center Top
16	08460	1	• Hardware Bag
17	20307	18	• Locknut Esna 1/2-13
18	21655	18	• Bolt C 1/2-13 x 2-1/2" Gr.5
19	09135	1	Main Bottom Ski Kit
20	16111	1	• Main Bottom Ski
21	08453	1	• Hardware Bag
22	20140	12	• Bolt H 5/8-11 x 1-3/4"
23	20309	12	• Locknut 5/8-11
24	09136	1	Main Top Ski Kit
25	16117	1	• Main Top Ski
26	08454	1	• Hardware Bag
27	20140	8	• Bolt H 5/8-11 x 1-3/4"
28	20309	8	• Locknut 5/8-11

Parts indented are included in the assembly under which they are indented.

Meyer Products LLC reserves the right, under its continuing product improvement program, to change construction or design details, specifications and prices without notice or without incurring any obligation.