


# PARTS & INSTALLATION INSTRUCTIONS

## 15967 P.A. Block Kit E-47/E-57/E-58/E-60/E-61/E-78




15966

**E-47, E-47H, E-57 & E-57H Only**

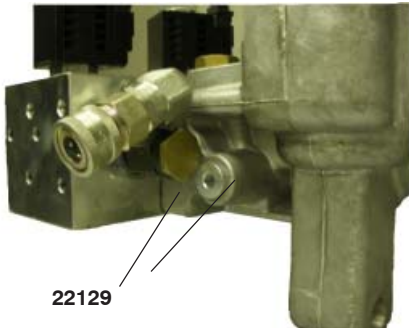

22129

**Note:** On the E-60/61 units only remove the lower adjustment and lower filter hex plugs and replace with 22129 Allen Plug to allow clearance for the crossover relief valve on the PA Block.

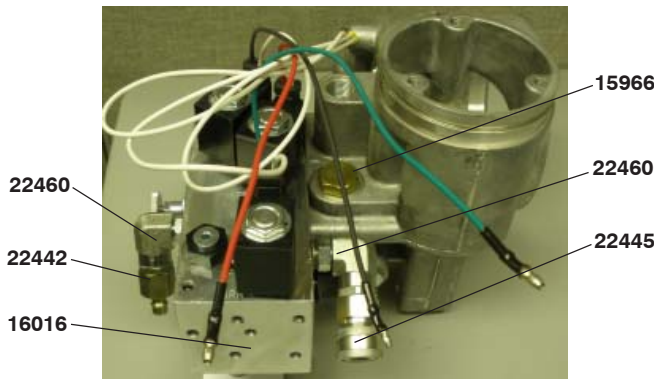

15966  
22460  
22442  
16016  
22460  
22445


**E-60, E-60H, E-61 & E-61H Only**

### PARTS LIST

Part No.	QTY	Description
15967		P.A. Block Kit
16016	1	• P.A. Block
08653	1	• Hardware Bag
15210	1	•• O-ring Kit
15912	1	•• Connector Adapter
15966	1	•• Cavity Plug
22652	2	•• SAE 6 x 1/4" NPT Adapter
22460	2	•• Elbow 90 degree SAE 6
22442	1	•• SAE 6 Nipple Female
22443	1	•• SAE 6 Female Coupler
22444	1	•• SAE 6 Nipple Female
22445	1	•• SAE 6 Female Coupler
22461	2	•• 1/4 x 38" Hose Assy SAE 6 x Face Seal
22129	2	•• Allen Plug W/Oring SAE 6

**Note:** Use 15966 Cavity plug in place of "A" Valve assembly on all hydraulic units.

**Note:** O-ring Kit 15210 contains the three o-rings which are used between the P.A. Block and the Base Casting. Be sure to use the correct o-ring sizes since different sizes are used on the E-60 & E-60H Hydraulic Units

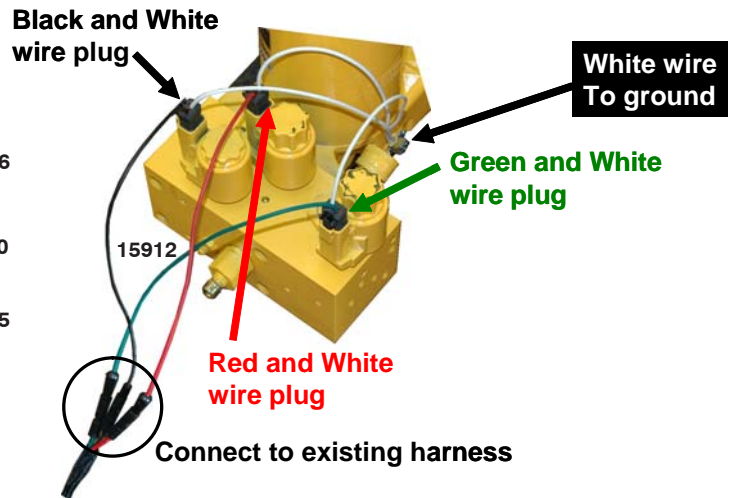

**Black and White wire plug**

**White wire To ground**

**Green and White wire plug**

**Red and White wire plug**

**Connect to existing harness**

**Note:** Only use couplers (22443 and 22444) on units installed on E-Z Mount Classic or E-Z Mount Custom Plow Systems where only the plow is removed from the vehicle.

#### Passenger Side NPT Hose with SAE Adapter



#### Passenger Side SAE Hose



#### Driver Side NPT Hose with SAE Adapter



#### Driver Side SAE Hose



Meyer Products reserves the right, under its continuing product improvement program, to change construction or design details, specifications and prices without notice or without incurring any obligations.