

Meyer Products

Service, Parts and Accessories




23039/23059 Harness Pin Out

The wireless gasoline engine controller is intended to control the start/stop, throttle increase/decrease and electric clutch on/off functions.


23039 Molex 33482-1601

Cavity	Color	Function E-73	Function V-73	Function V-73H	Function PB-73
1	Orange	Low Beam Relay	Low Beam Relay	Low Beam Relay	Low Beam Relay
2	Green	"C" Solenoid	S2	S3	S3
3	Brown	Hi Beam Relay	Hi Beam Relay	Hi Beam Relay	Hi Beam Relay
4	Red	"B" Solenoid	S3	S2	S1
5	White	Motor Solenoid	Motor Solenoid	Motor Solenoid	Motor Solenoid
6	Blue	Not Used	S5	S7	S4
7	Black	"A" Solenoid	S1	S1	S2
8	Yellow	Not Used	S6	S6	S6
9	Yellow	Park Signal	Park Signal	Park Signal	Park Signal
10	Green	Left Turn Signal	Left Turn Signal	Left Turn Signal	Left Turn Signal
11	Green/Black	Right Turn Signal	Right Turn Signal	Right Turn Signal	Right Turn Signal
12	Brown	Ground	Ground	Ground	Ground
13	Not Used	Not Used	Not Used	Not Used	Not Used
14	Not Used	Not Used	Not Used	Not Used	Not Used
15	Not Used	Not Used	Not Used	Not Used	Not Used
16	Purple	Not Used	S4	S5	S5

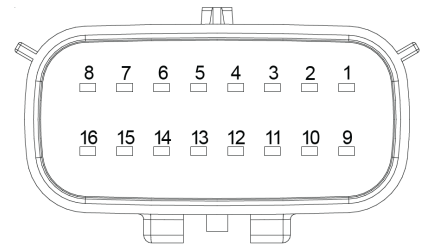

23059 Molex 33472-1601

Cavity	Color	Function E-73	Function V-73	Function V-73H	Function PB-73
1	Orange	Low Beam Relay	Low Beam Relay	Low Beam Relay	Low Beam Relay
2	Green	"C" Solenoid	S2	S3	S3
3	Brown	Hi Beam Relay	Hi Beam Relay	Hi Beam Relay	Hi Beam Relay
4	Red	"B" Solenoid	S3	S2	S1
5	White	Motor Solenoid	Motor Solenoid	Motor Solenoid	Motor Solenoid
6	Blue	Not Used	S5	S7	S4
7	Black	"A" Solenoid	S1	S1	S2
8	Yellow	Not Used	S6	S6	S6
9	Yellow	Park Signal	Park Signal	Park Signal	Park Signal
10	Green	Left Turn Signal	Left Turn Signal	Left Turn Signal	Left Turn Signal
11	Green/Black	Right Turn Signal	Right Turn Signal	Right Turn Signal	Right Turn Signal
12	Brown	Ground	Ground	Ground	Ground
13	Not Used	Not Used	Not Used	Not Used	Not Used
14	Not Used	Not Used	Not Used	Not Used	Not Used
15	Not Used	Not Used	Not Used	Not Used	Not Used
16	Purple	Not Used	S4	S5	S5

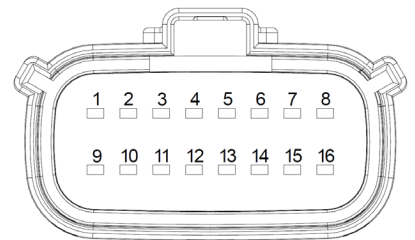

23059 Tyco 770099-1

Cavity	Color	Function E-73	Function V-73	Function V-73H	Function PB-73
1	Blue	Ignition	Ignition	Ignition	Ignition
2	White	Motor Solenoid	Motor Solenoid	Motor Solenoid	Motor Solenoid
3	Green	"C" Solenoid	S2	S3	S3
4	Red	"B" Solenoid	S3	S2	S1
5	Black	"A" Solenoid	S1	S1	S2
6	Green	Hi Beam Relay	Hi Beam Relay	Hi Beam Relay	Hi Beam Relay
7	Yellow	Not Used	S6	S6	S6
8	Brown	Aux	Aux	Aux	Aux
9	Yellow	Low Beam Relay	Low Beam Relay	Low Beam Relay	Low Beam Relay
10	Blue	Not Used	S5	S7	S4
11	Brown	Ground	Ground	Ground	Ground
12	Purple	Not Used	S4	S5	S5

